



KT1075TR Avigo RC Coupe Technical Bulletin – Quick Start Operation

As part of our ongoing commitment to customer satisfaction, we recently updated the assembly manual to include revised instructions for operation the Avigo RC Coupe. Please review all aspects of the User Guide to ensure proper assembly, use and maintenance of the vehicle.

Remote Function: Detailed operation on page 12 of Owner's Manual

1. On the vehicle, switch the manual/remote switch to remote.
2. Turn the vehicle power switch **On**.
3. Turn the remote power switch **On**. (the power LED should be red)
4. Move the vehicle coding switch (located in the battery compartment) so it matches the coding switch on the RC Coupe. (Switch lettered A,B,C,D)
5. Enter the password for the remote. (Default password is 1234)
6. Press Enter (E) key to confirm the password. The Setting LED will stay green if the password is entered correctly, otherwise it will be flashing red. Repeat steps 5 & 6 if necessary.
7. **NOTE: Remote powers Off after 1 minute of idle use.** Turn remote switch **Off** and **On** again and re-enter password.



Please be aware that the average remote to unit distance is approximately 25 to 30 feet. The remote control function is dependent on battery life in both the remote and Coupe and any objects which can block remote frequency.

NOTE: The Avigo RC Coupe will not function with the charger connected to the unit.